Honeywell | Generators

20 / 22 / 24 kW Air-Cooled Generator Sets

Standby Power Rating G007062-3 (Aluminum - Dark Gray) - 20 kW 60 Hz G007065-11 (Aluminum - Dark Gray) - 22 kW 60 Hz G007213-10 (Aluminum - Dark Gray) - 24 kW 60 Hz

INCLUDES

- Innovative engine design and rigorous testing: Honeywell generators use Generac's industry leading G-Force engine lineup for added peace of mind and reliability for when you need it most. The G-Force series of engines are purpose built and designed to handle the rigors of extended run times in high temperatures and extreme operating conditions.
- PrecisionPower[™] Electrical Technology: Superior harmonics and sine wave form produce less than 5% Total Harmonic Distortion for utility quality power. This allows confident operation of sensitive electronic and microchip based appliances, such as variable speed HVAC.
- Compensated Voltage Regulation: This state-of-the-art, power maximizing regulation system is the standard on all Honeywell models. It provides optimized fast response to changing load conditions and maximum motor starting capability by electronically torque-matching the surge loads to the engine. Digital voltage regulation at ± 1%.
- Mobile Link® Wi-Fi Connectivity: Honeywell standby generators are Wi-Fi enabled. Now users can remotely connect and monitor status on a smartphone, tablet, or PC from anywhere in the world using Mobile Link's free service.
- Honeywell Transfer Switches: The Honeywell generator line is offered with its own transfer systems and controls for total system compatibility.
- 18 in (457 mm) Offset: Listed and labeled by the Southwest Research Institute allowing installation as close as 18 in (457 mm) to a structure.* *Must be located away from doors, windows, and fresh air intakes and in accordance with local codes.

FEATURES & BENEFITS

- PrecisionPower[™]
 Electrical Technology
- Two-line multilingual digital LCD controller (English, Spanish, French, Portuguese)
- Standard Wi-Fi® connectivity available
- Electronic governor
 - System and status & maintenance interval LED indicators
 - Base fascia
- Flexible fuel line connector
- WhisperCheck[™] exercise
- Aluminum enclosure
- Natural gas or LP gas operation
- 5 year premium limited warranty
- Capability to be installed within 18 in (457 mm) of a building*
- * Only if located away from doors, windows, and fresh air intakes, unless otherwise directed by local codes.



20 / 22 / 24 kW Technical Specifications

ENGINE

WhisperCheck™ Exercise: Greatly reduces sound output and fuel consumption during bi-weekly exercise.

Generac G-Force design: Maximizes engine "breathing" for increased fuel efficiency. Plateau honed cylinder walls and plasma moly rings help the engine run cooler, reducing oil consumption and resulting in longer engine life.

"Spiny-lok" cast iron cylinder walls: Rigid construction and added durability provide long engine life.

Electronic ignition/spark advance: These features combine to assure smooth, quick starting every time.

Full pressure lubrication system: Pressurized lubrication to all vital bearings means better performance, less maintenance, and longer engine life. Now featuring up to a 2 year/200 hour oil change interval.

Low oil pressure shutdown system: Shutdown protection prevents catastrophic engine damage due to low oil.

High temperature shutdown: Prevents damage due to overheating.

GENERATOR

Test criteria: Prototype tested; system torsional tested; NEMA MG1-22 evaluation; motor starting ability.

Revolving field: Allows for a smaller, light weight unit that operates 25% more efficiently than a revolving armature generator.

Skewed stator: Produces a smooth output waveform for compatibility with electronic equipment.

Displaced phase excitation: Maximizes motor starting capability.

Automatic voltage regulation: Regulating output voltage to $\pm 1\%$ prevents damaging voltage spikes.

EPA Certified for non-emergency applications: Allows unit to be used for demand response applications. (22 kW and 24 kW units only.)

UL 2200 listed: For your safety.

TRANSFER SWITCH

Sold separately.

MOBILE LINK[®] WI-FI CONNECTIVITY

Free with select Honeywell home standby generators.

Ability to view generator status: Monitor the generator status with a smartphone, tablet, or computer at any time via the Mobile Link application for complete peace of mind.

Ability to view generator Exercise/Run and Total

Hours: Review the generator's complete protection profile for exercise hours and total hours.

Ability to view generator maintenance

information: Provides maintenance information for the specific model generator when scheduled maintenance is due.

Monthly report with previous month's activity: Detailed monthly reports provide historical generator information.

Ability to view generator battery information:

Built-in battery diagnostics display current state of the battery.

Weather information: Provides detailed local ambient weather conditions for the generator's location.

SYNC[™] 3.0 CONTROLS

AUTO/MANUAL/OFF illuminated buttons: Select the operating mode and provide easy, at-a-glance status indication of any condition.

Two-line plain text multilingual LCD: Provides homeowners with easily visible logs of history, maintenance, and events, up to 50 occurrences.

Sealed, raised buttons: Smooth, weather-resistant user interface for programming and operations.

Utility voltage sensing: Constantly monitors utility voltage, setpoints 65% dropout, 80% pick-up of standard voltage.

Generator voltage sensing: Constantly monitors generator voltage to verify the cleanest power is delivered to the home.

Utility interrupt delay: Prevents nuisance startups of the engine. Adjustable 2–1500 seconds by a qualified dealer (five second factory default).

Engine warm-up: Verifies engine is ready to assume load; setpoint approximately one minute.

Programmable exerciser: Operates engine to prevent oil seal drying and damage between power outages by running the generator for five minutes every other week. Also offers a selectable setting for weekly or monthly operation, providing flexibility and lower fuel costs to the owner.

Smart battery charger: Delivers charge to the battery only when needed at varying rates, depending on outdoor air temperature. Compatible with lead acid and AGM-style batteries.

Electronic governor: Maintains constant 60 Hz frequency.

UNIT

SAE aluminum weather protective enclosure: Sound attenuated enclosure provides quiet operation and weather protection, able to withstand winds up to 150 mph (241 km/h). Hinged key locking roof panel for security. Lift-out front panel for easy access to all routine maintenance items. Electrostatically applied textured epoxy paint for

added durability. Enclosed critical grade muffler: Quiet, critical grade muffler is mounted inside the unit to prevent injuries.

Small, compact, attractive: Makes for an easy, eye appealing installation, as close as 18 in (457 mm) away from a structure.

INSTALLATION SYSTEM

14 in (35.6 cm) flexible fuel line connector:

Listed ANSI Z21.75/CSA 6.27 outdoor appliance connector for the required connection to the gas supply piping.

Integral sediment trap: Meets IFGC and NFPA 54 installation requirements.

20 / 22 / 24 kW Technical Specifications


		20 KW	22 KW	24 KW
Rated maximum continuous pow	ver capacity (LP)	20,000 Watts*	22,000 Watts*	24,000 Watts
Rated maximum continuous pow	/er capacity (NG)	18,000 Watts*	19,500 Watts*	21,000 Watts
Rated voltage			240	
Rated maximum continuous loac	l current – 240 V (LP / NG)	83.3 / 75.0	91.7 / 81.3	100/87.5
Fotal Harmonic Distortion			Less than 5%	
Vain line circuit breaker		90 amp	100 amp	100 amp
Phase			1	
Number of rotor poles			2	
Rated AC frequency			60 Hz	
Power factor			1.0	
Battery requirement (not included)		12 volts, Group 26R 540 CCA minimum or Group 35AGM 650 CCA minimum		
Unit weight (lb / kg)		436/198	445/202	455/206
Dimensions (L x W x H) in / cm			48 x 25 x 29 / 121.8 x 63.8 x 73.2	
Sound output in dB(A) at 23 ft (7 m) with generator operating at normal load**			67	
Sound output in dB(A) at 23 ft (7 m) with generator in WhisperCheck™ low speed exercise**		55	5	7
Exercise duration			5 min	
INGINE				
ngine type		GENERAC G-FORCE 1000 SERIES		
lumber of cylinders		2		
Displacement			999 cc	
Cylinder block			Aluminum w/ cast iron sleeve	
alve arrangement			Overhead valve	
gnition system			Solid-state w/ magneto	
Governor system			Electronic	
Compression ratio			9.5:1	
Starter			12 VDC	
Dil capacity including filter			Approx. 1.9 qt / 1.8 L	
Operating rpm			3,600	
Fuel consumption				
Vatural gas	ft³/hr (m³/hr)			
	1/2 load	164 (4.64)	203 (5.75)
	Full load	287 (8.13)	306 (8.66)
_iquid propane	ft³/hr (gal/hr) [L/hr]			
	1/2 load	86 (2.36) [8.95]	92 (2.53	3) [9.57]
	Full load	136 (3.74) [14.15]	142 (3.90	
Note: Fuel pipe must be sized for	or full load. Required fuel pressure to generator fuel inlet—3.5–7 (LP) or ft ³ /hr x 1,000 (NG). For Megajoule content, multiply m ³ /h	in water column (0.87–1.74 kPa) for N	IG, 10–12 in water column (2.49–2.9	8 kPa) for LP gas. For BTU
	LEP of IC711 X 1,000 (NG). For Megajoure concent, multiply IN-1	II X 95.15 (LF) 01 III7/II X 57.20 (NG).		
CONTROLS				
Fwo-line plain text multilingual LCD				
	.CD		mple user interface for ease of operation	
Node buttons: AUTO	.CD	Autor	natic Start on Utility failure. 7 day exer	ciser.
Node buttons: AUTO MANUAL	.CD	Autor Start with starter con	natic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe	ciser. er to load takes place.
Node buttons: AUTO MANUAL OFF		Autor Start with starter con	natic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger	ciser. er to load takes place.
Node buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess		Autor Start with starter con	natic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard	ciser. er to load takes place.
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication	sages	Autor Start with starter con Stops unit. F	natic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard Standard	ciser. er to load takes place. still operate.
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe	sages en 2-1500 seconds	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard Standard tandard (programmable by dealer only	ciser. er to load takes place. still operate.
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut	sages en 2–1500 seconds ility adjustable (brownout setting)	Autor Start with starter con Stops unit. F	natic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard Standard tandard (programmable by dealer only From 140-171 V/190-216 V	ciser. er to load takes place. still operate.
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe	sages en 2–1500 seconds ility adjustable (brownout setting)	Autor Start with starter con Stops unit. F	natic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard	ciser. er to load takes place. still operate.
Vode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs	sages en 2–1500 seconds ility adjustable (brownout setting)	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each	ciser. er to load takes place. still operate. r)
Vode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence	sages en 2–1500 seconds ility adjustable (brownout setting)	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu	ciser. r to load takes place. still operate. r) m duration).
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence Starter lock-out	sages en 2–1500 seconds ility adjustable (brownout setting)	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine f	ciser. r to load takes place. still operate. r) m duration).
Adde buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess angine Run Hours indication Programmable start delay betwe Utility Voltage Loss/Return to Ut future Set Capable exerciser/Exe Run/Alarm/Maintenance logs angine start sequence distret lock-out mart battery charger	sages een 2–1500 seconds ility adjustable (brownout setting) ercise Set Error warning	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine f Standard	ciser. r to load takes place. still operate. r) m duration).
Adde buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess ingine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut future Set Capable exerciser/Exe Run/Alarm/Maintenance logs ingine start sequence itarter lock-out ismart battery charger Charger Fault/Missing AC warning	sages een 2–1500 seconds ility adjustable (brownout setting) ercise Set Error warning ng	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu not re-engage until 5 sec after engine h Standard Standard Standard	ciser. r to load takes place. still operate. r) m duration).
Adde buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess ingine Run Hours indication rrogrammable start delay betwe Itility Voltage Loss/Return to Ut iuture Set Capable exerciser/Exe Run/Alarm/Maintenance logs ingine start sequence tarter lock-out mart battery charger Charger Fault/Missing AC warnin ow Battery/Battery Problem pro	sages een 2–1500 seconds ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu not re-engage until 5 sec after engine h Standard Standard Standard Standard	ciser. r to load takes place. still operate. r) m duration).
Adde buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess ingine Run Hours indication programmable start delay betwe Itility Voltage Loss/Return to Ut uture Set Capable exerciser/Exe Run/Alarm/Maintenance logs ingine start sequence tarter lock-out mart battery charger charger Fault/Missing AC warnin ow Battery/Battery Problem pro utomatic voltage regulation wit	sages een 2–1500 seconds :ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine h Standard Standard Standard Standard Standard	ciser. r to load takes place. still operate. r) m duration).
Aude buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess ingine Run Hours indication Programmable start delay betwe Utility Voltage Loss/Return to Ut future Set Capable exerciser/Exe Run/Alarm/Maintenance logs ingine start sequence starter lock-out imart battery charger Charger Fault/Missing AC warnin cow Battery/Battery Problem pro uutomatic voltage regulation wit Jnder-Frequency/Overload/Step	sages een 2–1500 seconds ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection pper Overcurrent protection	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine h Standard Standard Standard Standard Standard Standard Standard	ciser. r to load takes place. still operate. r) m duration).
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence Starter lock-out Smart battery charger Charger Fault/Missing AC warnir cow Battery/Battery Problem pro tutomatic voltage regulation wit Jnder-Frequency/Overload/Step Safety Fused/Fuse Problem prot	sages een 2–1500 seconds ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection pper Overcurrent protection pection	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine h Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard	ciser. r to load takes place. still operate. r) m duration).
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwee Utility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence Starter lock-out Smart battery charger Charger Fault/Missing AC warnin cow Battery/Battery Problem pro- tautomatic voltage regulation wit Jnder-Frequency/Overload/Step Safety Fused/Fuse Problem pro- tautomatic Low Oil Pressure/High	sages een 2–1500 seconds ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection pper Overcurrent protection pper Overcurrent protection h Oil Temperature shutdown	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine H Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard	ciser. r to load takes place. still operate. r) m duration).
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence Starter lock-out Smart battery charger Charger Fault/Missing AC warnin Low Battery/Battery Problem prot Automatic voltage regulation wit Jnder-Frequency/Overload/Step Safety Fused/Fuse Problem prot Automatic Low Oil Pressure/Higl Dvercrank/Overspeed (@ 72 Hz)	sages een 2–1500 seconds :ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection pper Overcurrent protection per Overcurrent protection ection h Oil Temperature shutdown //RPM Sense Loss shutdown	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine H Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard Standard	ciser. r to load takes place. still operate. r) m duration).
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwee Utility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence Starter lock-out Smart battery charger Charger Fault/Missing AC warnin cow Battery/Battery Problem prot Automatic voltage regulation wit Jnder-Frequency/Overload/Step Safety Fused/Fuse Problem prot Automatic Low Oil Pressure/Higl Overcrank/Overspeed (@ 72 Hz) High Engine Temperature shutdor	sages een 2–1500 seconds :ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection pper Overcurrent protection pper Overcurrent protection ection h Oil Temperature shutdown //RPM Sense Loss shutdown own	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine H Standard	ciser. r to load takes place. still operate. r) m duration).
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Jtility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence Starter lock-out Smart battery charger Charger Fault/Missing AC warnir Low Battery/Battery Problem prot Automatic voltage regulation wit Jnder-Frequency/Overload/Step Safety Fused/Fuse Problem prot Automatic Low Oil Pressure/Higl Overcrank/Overspeed (@ 72 Hz) High Engine Temperature shutdo Internal Fault/Incorrect Wiring p	sages een 2–1500 seconds :ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection pper Overcurrent protection per Overcurrent protection ection h Oil Temperature shutdown //RPM Sense Loss shutdown own rotection	Autor Start with starter con Stops unit. F	natic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe Power is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine h Standard	ciser. r to load takes place. still operate. r) m duration).
Mode buttons: AUTO MANUAL OFF Ready to Run/Maintenance mess Engine Run Hours indication Programmable start delay betwe Utility Voltage Loss/Return to Ut Future Set Capable exerciser/Exe Run/Alarm/Maintenance logs Engine start sequence Starter lock-out Smart battery charger Charger Fault/Missing AC warnir Low Battery/Battery Problem pro	sages een 2–1500 seconds :ility adjustable (brownout setting) ercise Set Error warning ng otection and Battery Condition indication ch over and under voltage protection pper Overcurrent protection per Overcurrent protection ection h Oil Temperature shutdown //RPM Sense Loss shutdown own rotection	Autor Start with starter con Stops unit. F	matic Start on Utility failure. 7 day exer trol, unit stays on. If utility fails, transfe 'ower is removed. Control and charger Standard tandard (programmable by dealer only From 140-171 V/190-216 V Standard 50 events each ing: 16 sec on, 7 rest (90 sec maximu tot re-engage until 5 sec after engine H Standard	ciser. r to load takes place. still operate. r) m duration).


Rating definitions - Optional Standby: Applicable for supplying backup power for the duration of the utility power outage with correct maintenance performed. No overload capability is available for this rating. (All ratings in accordance with BS5514, ISO3046, UL2200, and DIN6271).* Maximum wattage and current are subject to and limited by such factors as fuel BTU/megajoule content, ambient temperature, altitude, engine power and condition, etc. Maximum power decreases approximately 3.5% for each 1,000 ft (304.8 m) above sea level; and also will decrease approximately 1% for each 10 °F (6 °C) above 60 °F (16 °C). *Sound levels are taken from the front of the generator. Sound levels taken from other sides of the generator may be higher depending on installation parameters.

20 / 22 / 24 kW Available Accessories

MODEL#	PRODUCT	DESCRIPTION
G005819-0	26R Wet Cell Battery	Every standby generator requires a battery to start the system. The recommended 26R wet cell battery is for use with all air-cooled standby products.
G007101-0	Battery Pad Warmer	The pad warmer rests under the battery. Recommended for use if the temperature regularly falls below 0 °F (-18 °C). (Not necessary for use with AGM-style batteries.)
G007102-0	Oil Warmer	The oil warmer slips directly over the oil filter. Recommended for use if the temperature regularly falls below 0 °F (-18 °C).
G007103-1	Breather Warmer	The breather warmer is for use in extreme cold weather applications. For use with Sync™ controllers only in climates where heavy icing occurs.
G005621-0	Auxiliary Transfer Switch Contact Kit	The auxiliary transfer switch contact kit allows the transfer switch to lock out a single large electrical load that may not be needed.
G006160-0	Touch-Up Paint Kit	If the generator enclosure is scratched or damaged, it is important to touch-up the paint to protect it from future corrosion. The touch-up paint kit includes the necessary paint to correctly maintain or touch-up a generator enclosure.
G006485-0	Scheduled Maintenance Kit	Scheduled maintenance kits provide all the items necessary to perform complete routine maintenance on a Honeywell automatic standby generator (oil not included).
G007001-0 (50 AMP) G007006-0 (100 AMP)	Smart Management Module	Smart Management Modules (SMM) are used to optimize the performance of a standby generator. They large electrical loads upon startup and shed them to aid in recovery when overloaded. In many cases, using SMM's can reduce the overall size and cost of the system.
G007005-0	Wi-Fi LP Tank Fuel Level Monitor	The Wi-Fi enabled LP tank fuel level monitor provides constant monitoring of the connected LP fuel tank. Monitoring the LP tank fuel level is an important step in verifying the generator is ready to run during an unexpected power failure. Status alerts are available through a free application to notify users when the LP fuel tank is in need of a refill.
G007169-0 (4G LTE) G007170-0 (WI-FI/ ETHERNET)	Mobile Link® Cellular Accessories	Mobile Link family of Cellular Accessories allows users to monitor generator status from anywhere in the world using a smartphone, tablet, or PC. Easily access information such as the current operating status and maintenance alerts. Users can connect an account to an authorized service dealer for fast, friendly, and proactive service. With Mobile Link, users are taken care of before the next power outage.
G007221-0 - DARK GRAY	Base Plug Kit	Base plugs snap into the lifting holes on the base of air-cooled home standby generators. This offers a sleek, contoured appearance, as well as offers protection from rodents and insets by covering the lifting holes located in the base. Kit contains four plugs, sufficient for use on a single air-cooled home standby generator.

Dimensions and UPCs

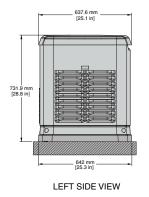

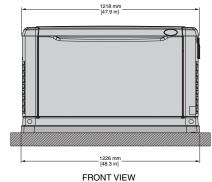

MODEL	UPC
G007062	696471074253
G007065	696471074284
G007213	696471078237

©2022 Generac Power Systems, Inc. All rights reserved. Specifications subject to change without notice.

The Honeywell trademark is used under license from Honeywell International Inc.

Honeywell International Inc. makes no representation or warranties with respect to this product. This product is manufactured by Generac Power Systems, Inc., Waukesha, WI. 53189, USA.

Generac Power Systems, Inc.

S45 W29290 Hwy 59 Waukesha, WI. 53189 1.855.GEN.INFO www.honeywellgenerators.com

A0000937819 | Rev B | 03/2022

